



MOTOROLA SBG941 y SBG6580



Abra el browser (navegador) desde un equipo conectado a su red, y en la barra de direcciones (donde se coloca www.) digite la siguiente dirección IP: 192.168.1.1

The login page features the Motorola logo on the left. The main heading is 'Login'. Below it, a message reads: 'Please enter username and password to login.' There are two input fields: 'Username' and 'Password'. A 'Login' button is positioned below the password field.

Accede con el **Username:** admin y en **Password:** Motorola

Después de acceder seleccionamos la opción Wireles ubicado en la parte derecha arriba.

The wireless status page has a navigation bar at the top with options: Status, Basic, Advanced, Firewall, Parental Control, **Wireless**, and Logout. The 'Wireless' option is highlighted with a red box. On the left is the Motorola logo. The main heading is 'Status'. Below it, there is a 'Connection' link with a 'help' link next to it. A descriptive text follows: 'This page displays information on the status of the cable modem's HFC and'.

En wireless seleccionar la opción **primary network**



En **Network Name** colocar el nombre de red y en **WPA pre-Shared Key** colocar contraseña luego darle **APPLY**

Primary Network	Enabled ▾
Network Name (SSID)	tricom
Closed Network	Disabled ▾
AP Isolate	Disabled ▾
WPA	Disabled ▾
WPA-PSK	Disabled ▾
WPA2	Disabled ▾
WPA2-PSK	Enabled ▾

WPA/WPA2 Encryption	TKIP+AES ▾
WPA Pre-Shared Key	00000000
	<input checked="" type="checkbox"/> Show Key
RADIUS Server	0.0.0.0
RADIUS Port	1812
RADIUS Key	
Group Key Rotation Interval	0
WPA/WPA2 Re-auth Interval	3600

WEP Encryption	Disabled ▾
Shared Key Authentication	Optional ▾
802.1x Authentication	Disabled ▾
Network Key 1	
Network Key 2	
Network Key 3	
Network Key 4	
Current Network Key	1 ▾
PassPhrase	

Generate WEP Keys

Apply